



Sony Vaio SVE111B11L Screen Replacement

Replacing a broken or melted screen.

Written By: John Noll






TOOLS:

- Small blue opening tool PH0 Phillips bit with driver handle (1)
-

Step 1 — Battery



 Remove charging adaptor. Some charge may still be in the battery or computer. DO NOT touch connectors or copper yellow connector.

- Locating the Battery
- Flip Computer Toward Yourself

Step 2




- Releasing Battery
- Locate two switches with the word “lock” and “release” on them.

Step 3




- Removing Battery
- Push towards each other while simultaneously lifting up the battery in between the two switches.

Step 4 — Keyboard Assembly

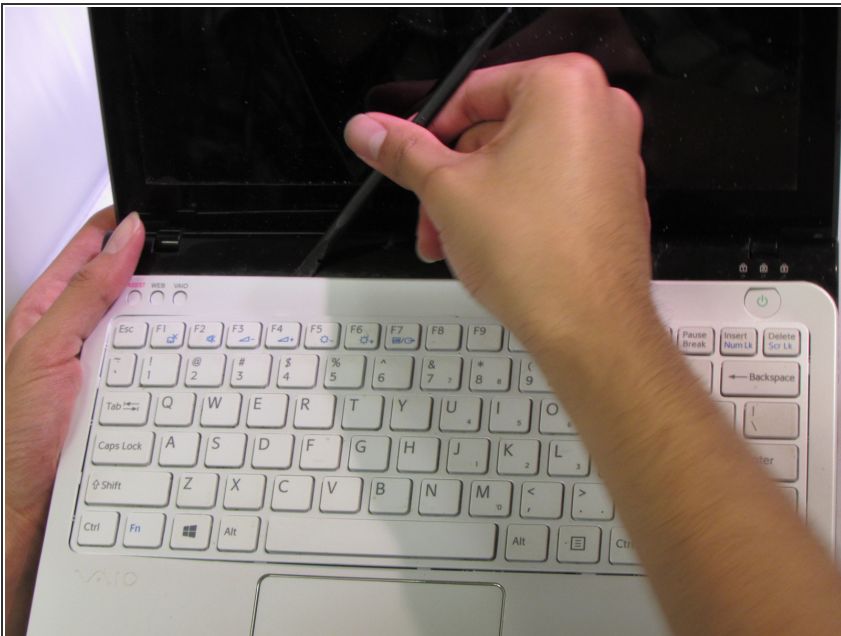

- ⚠ Remove charging adaptor. Some charge may still be in the battery or computer.
- ⚠ DO NOT touch connectors or copper yellow connector.
- The key board is attached by a screw on the back.
- The front cover also holds the keyboard assembly.
- Remove the memory door to access the screw for the keyboard.
- ⓘ The screws for the memory door do not come out. they are held from falling out.

Step 5

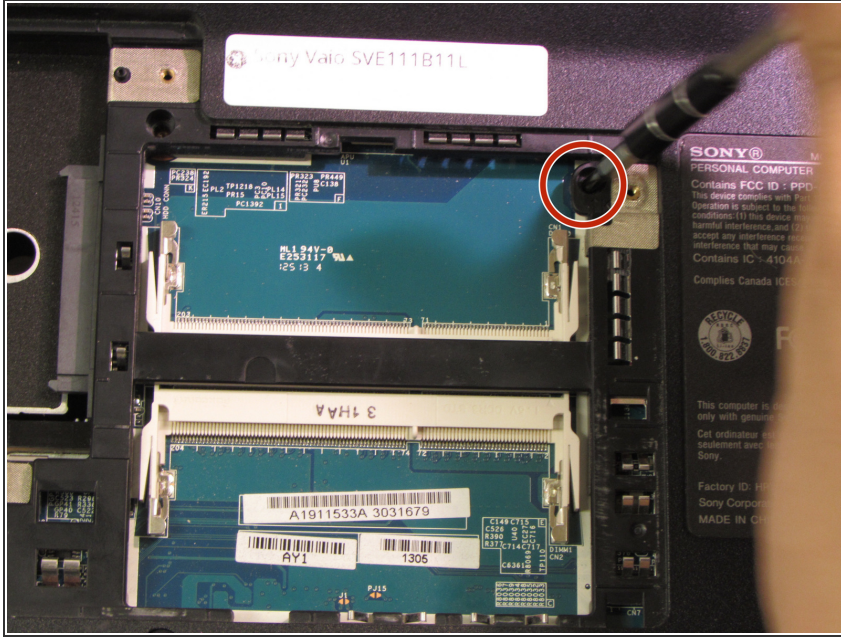


- Locate the screw that holds the keyboard assembly in place.
- Remove this screw.
- Size: L 6.7mm X D 1.9mm

Step 6




- ⓘ Be careful of the keyboard wire connection.
- ⓘ Making sure that you when you slide the wires out. You slide from the side opposite the solder connections.
- Flip computer over and open.

Step 7

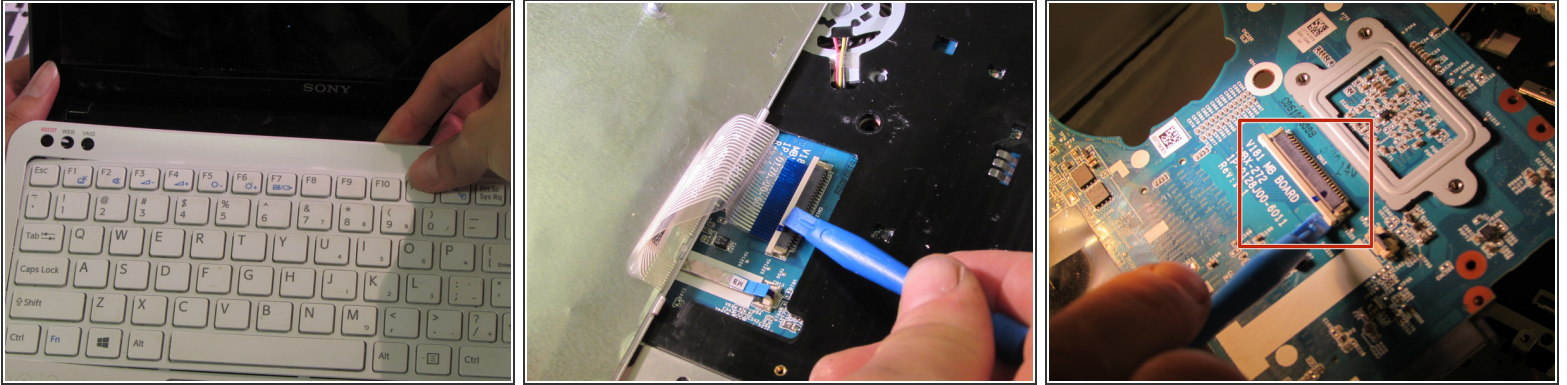


- Gently pry the keyboard assembly from the front. (closest to the screen) With the blue spudger.
- When the front of the keyboard is about two inches up. Carefully, using the blue spudger, pull out and slightly up on the connector clip. Then remove the wire connector.
- Gently lift the key board assembly up and out.

Step 8 — Motherboard

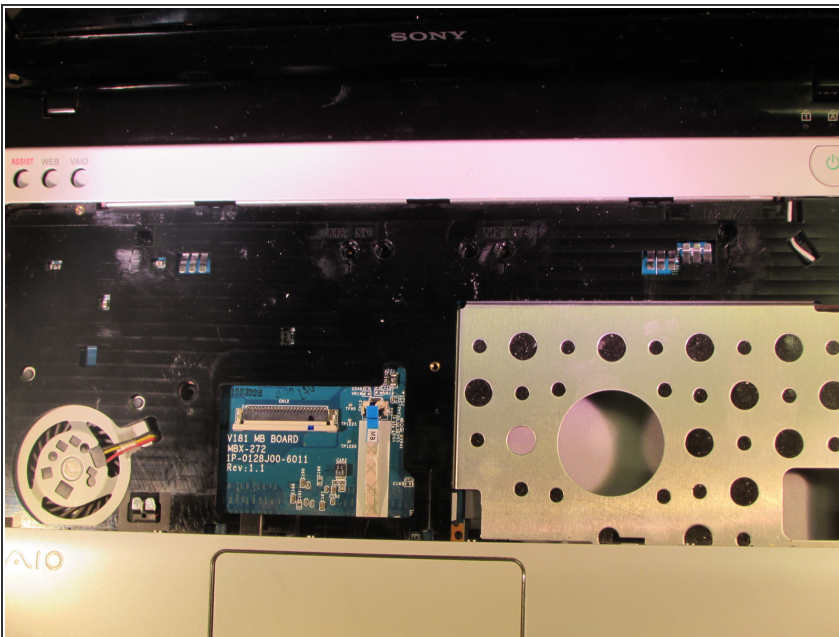




- ⚠ Remove charging adaptor. Some charge may still be in the battery or computer.
- ⚠ DO NOT touch connectors or copper yellow connector.
- With the covers off.

Step 9

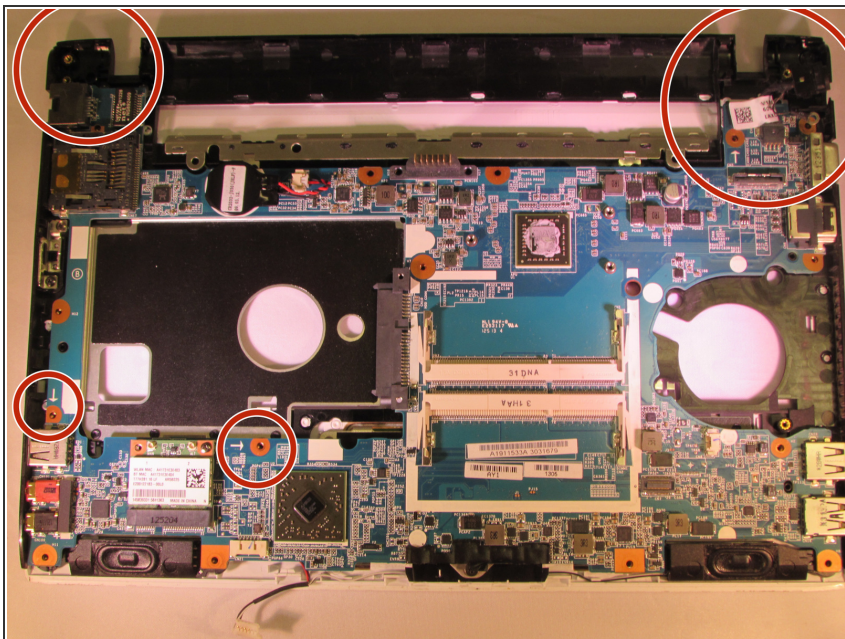



- Locate and remove the screws holding the motherboard down.
- Screws: L 4.6mm X D 1.85mm

Step 10

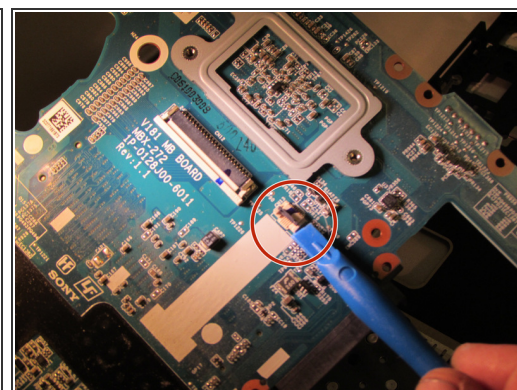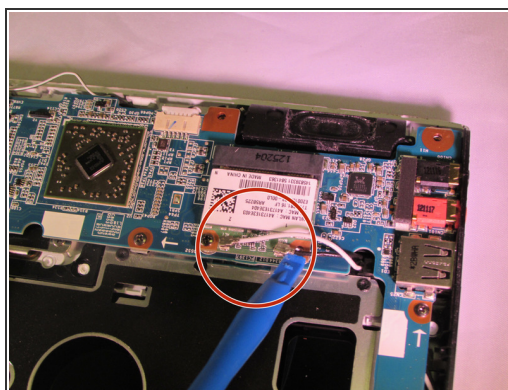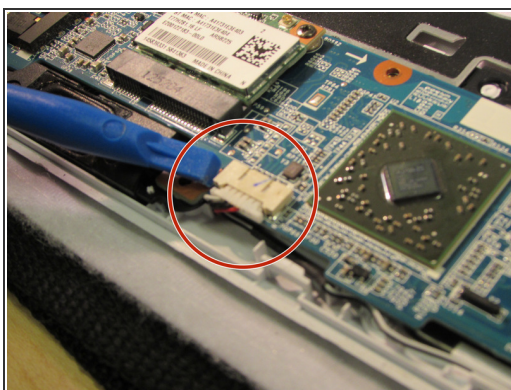



- Locate the wires and connectors.
- Unplug all connectors that will be in the way of removing the motherboard.

Step 11

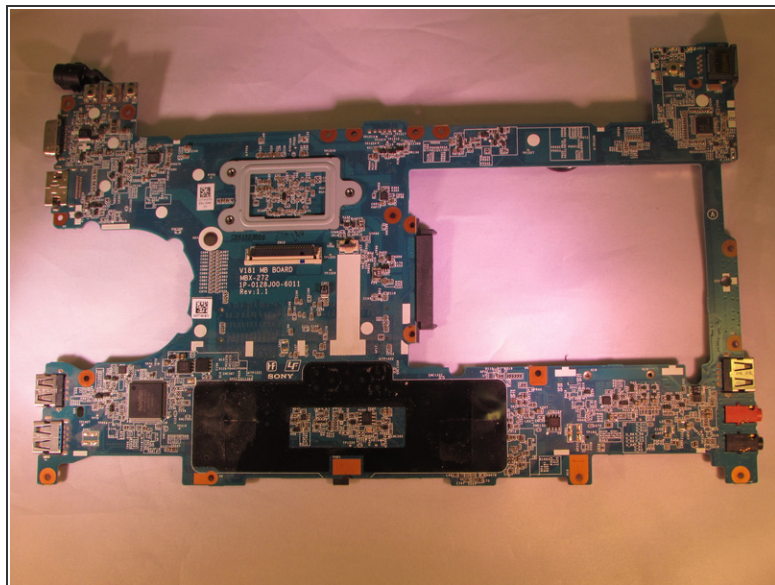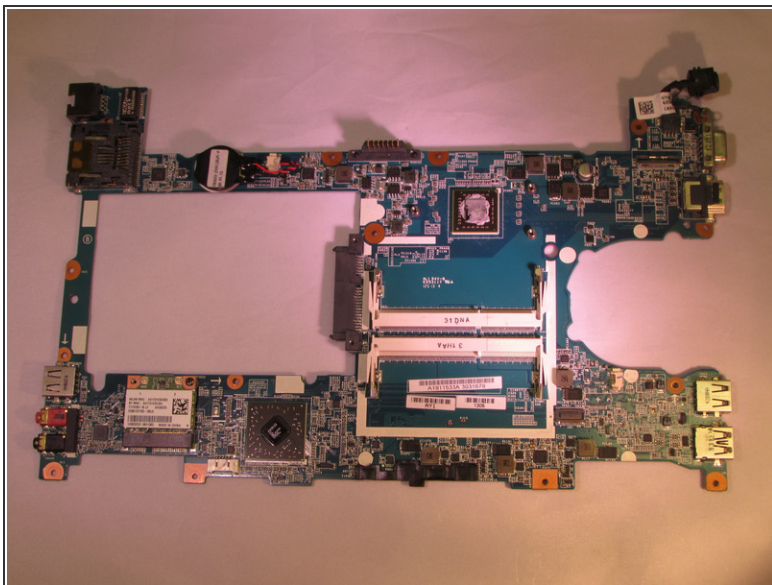

- Being careful of the loose connectors and wires.
- Gently lift the motherboard out.

Step 12 — Screen

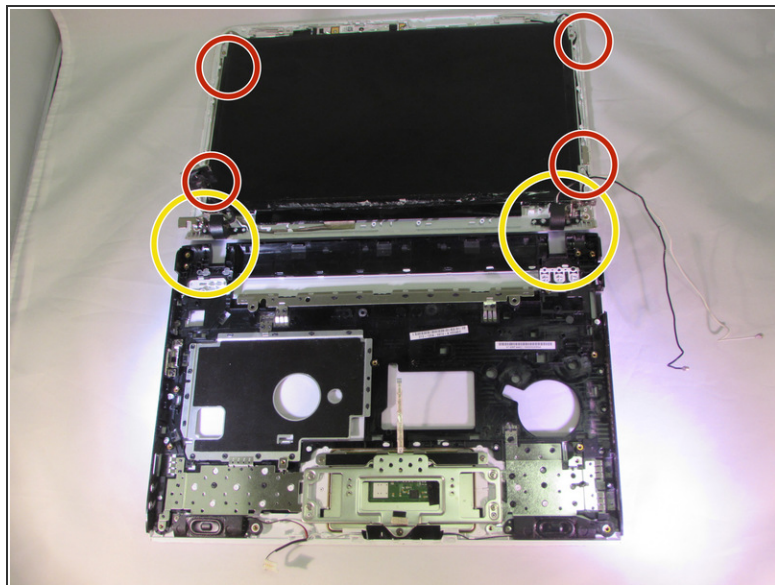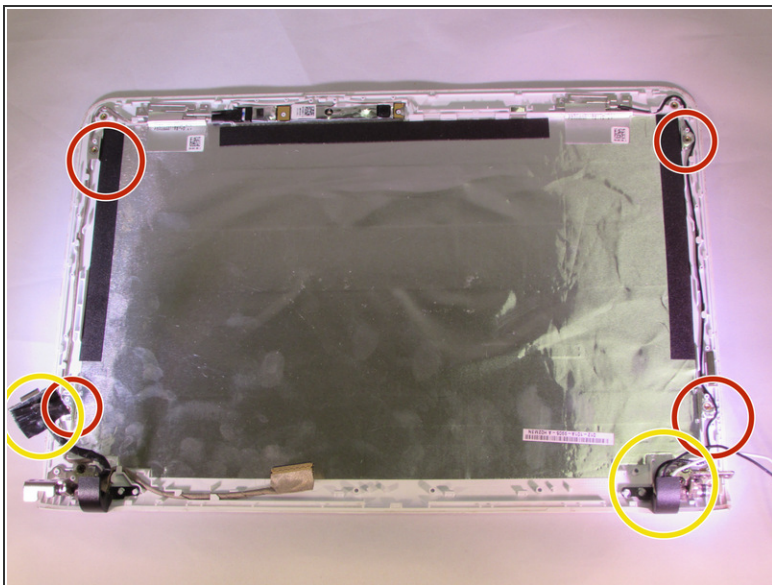


⚠ Remove charging adaptor and battery. Some charge may still be in the battery or computer.

⚠ DO NOT touch connectors or copper yellow connector.




- Locate screws. L 3.35mm X D 1.8mm
- Remove Screws.
- Lay the screen on a hard flat surface.
- Remove hinges and wires for ease of removal.

Step 13

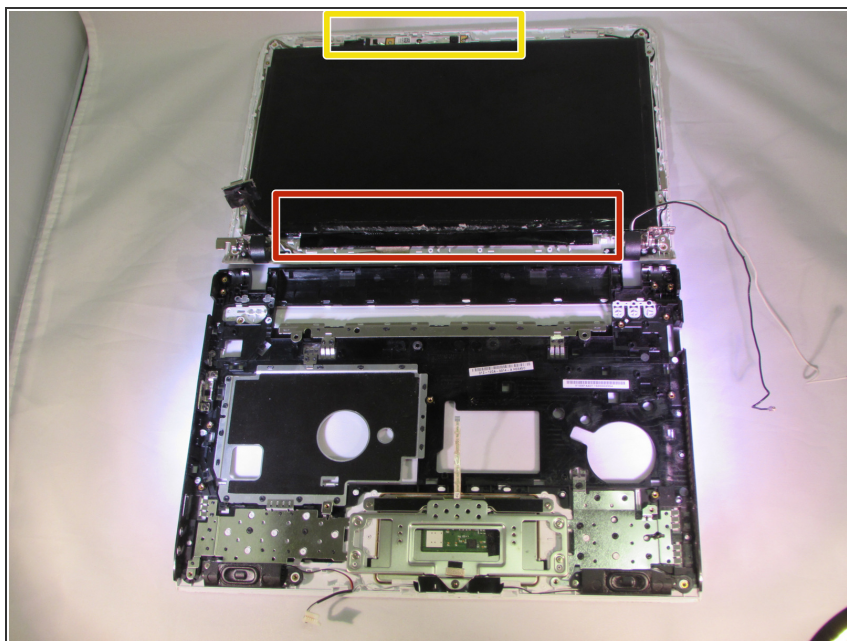



- Gently remove the screen cover.
- Being careful of the camera at the top of the screen.
- Being careful of the seal tape between the cover and the screen.

Step 14

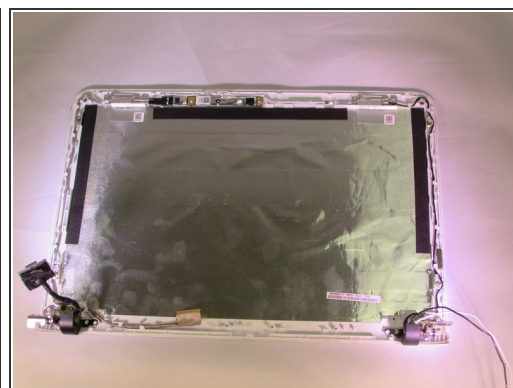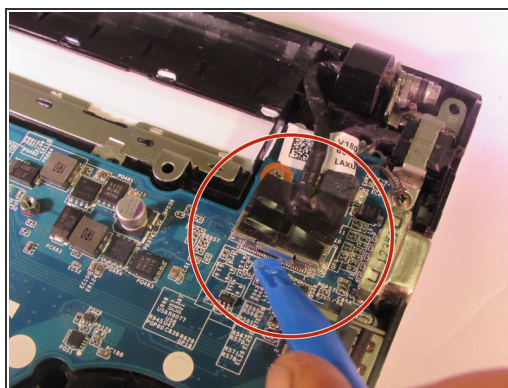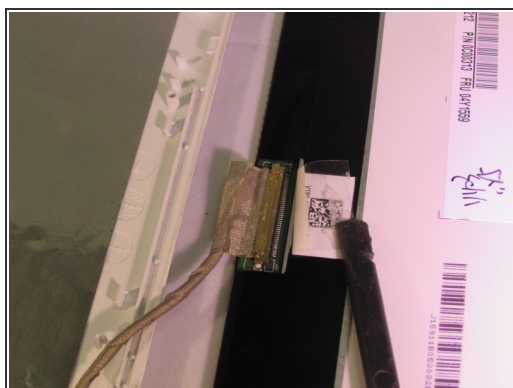

- Locate the wires and connectors.
- Unplug the wires from the connectors.
- Being careful of the yellow tape around the connection.

Step 15

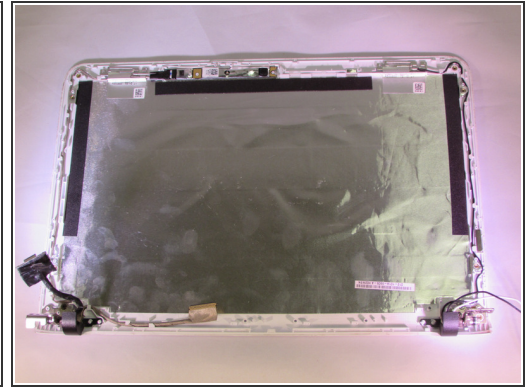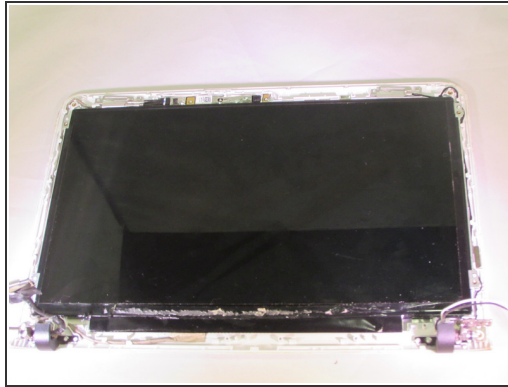

- Gently lift the screen assembly up and out.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-23 02:02:27 AM.